ARAT Navigation mount

Car Manufacturer: VOLKSWAGEN

TYPE: GOLF Mk 3

Part No: NS1007.6

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme
...the world of communication

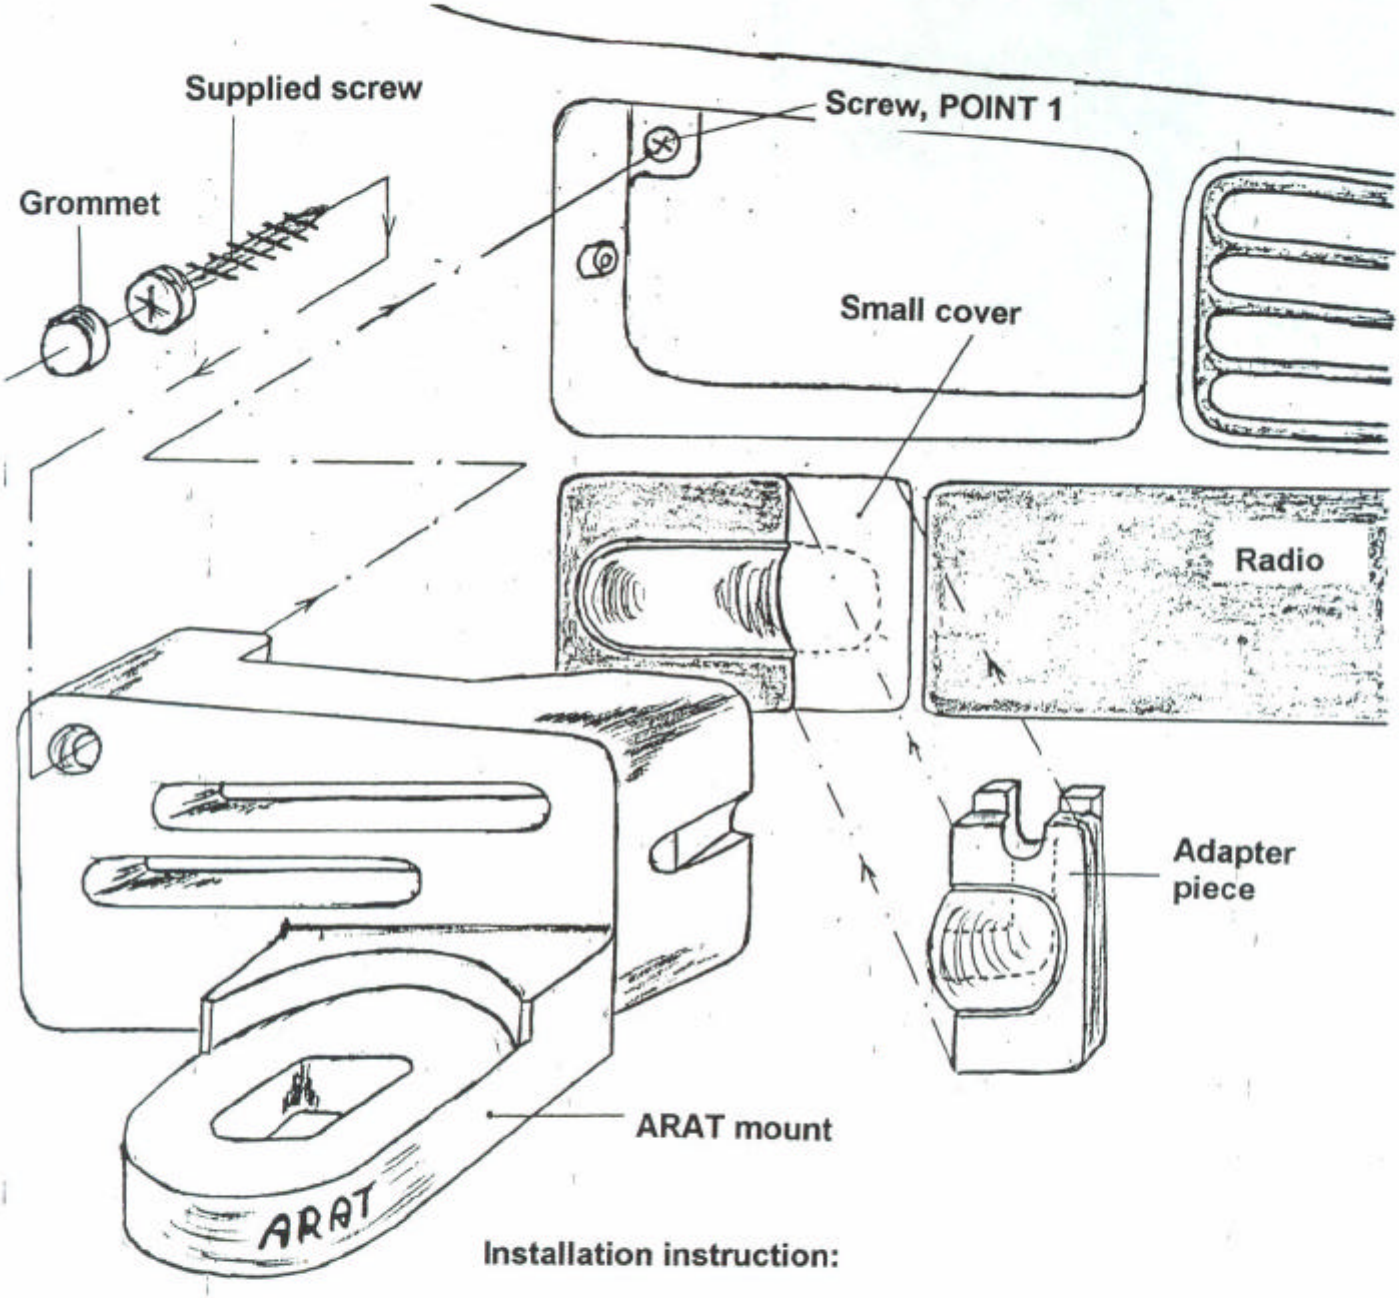

Installation instruction:

1. Remove the left hand airvent by prising it out and remove the screw at POINT 1
2. Remove the small cover
3. Place / push the ARAT mount into the space where the airvent was and secure it with the supplied screw
4. Route the cable through the mount and thrafter the cable can be channelled through the adapter piece.